


WALDORF WOOD OR RP ASSEMBLY INSTRUCTIONS

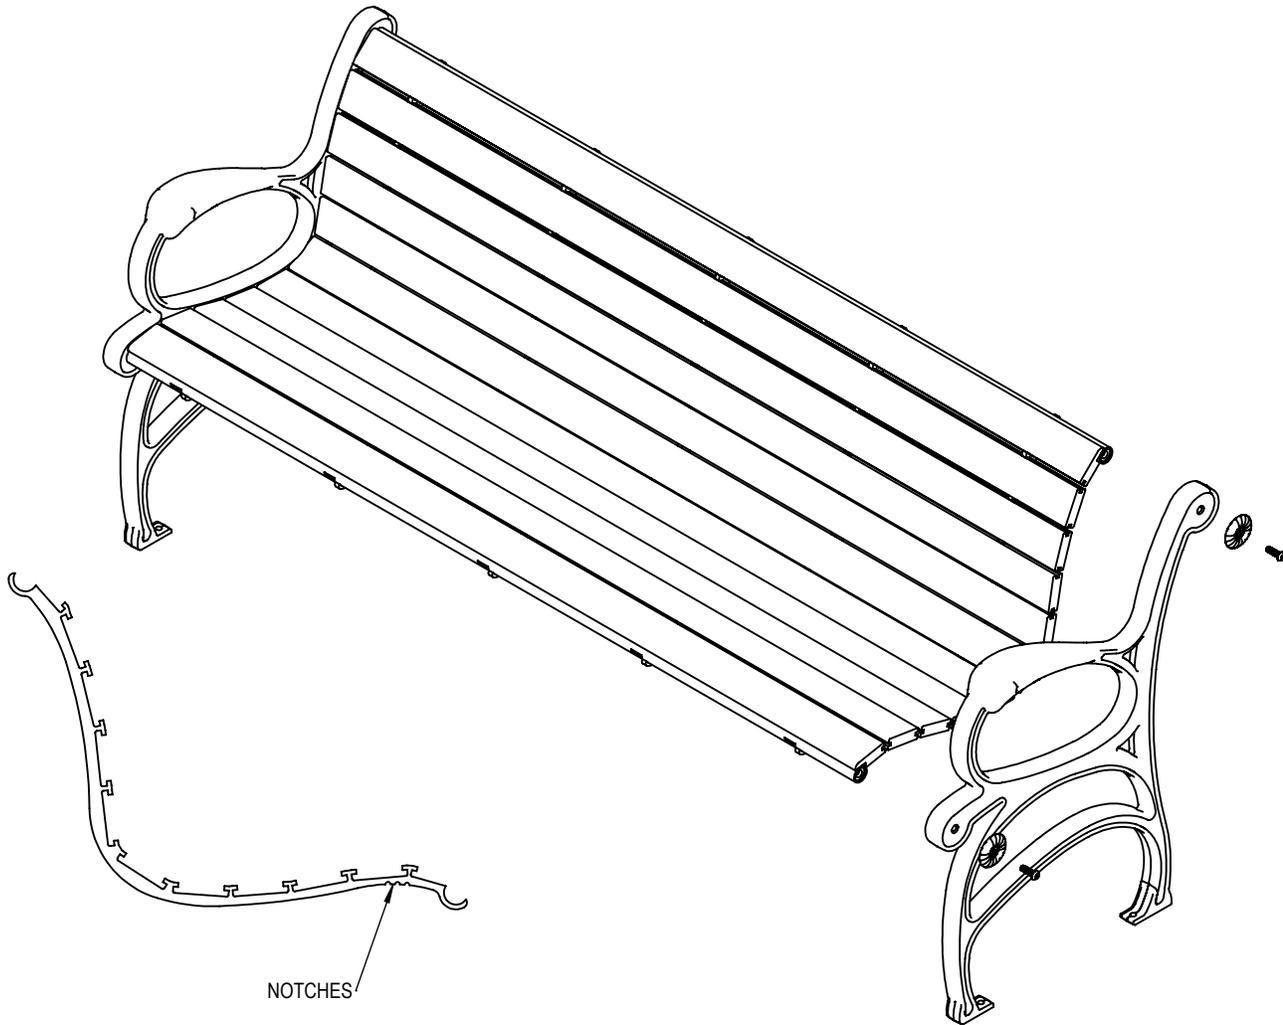

- ASSEMBLE ON A CLEAN SCRATCH FREE SURFACE.
- LINE UP THE END FRAME TO COINCIDE WITH THE CURVE OF THE BENCH.
FOR REFERENCE, NOTCHES ON STRAPS ARE THE BOTTOM OF THE BENCH
- PLACE THE END FRAME OVER THE END OF THE BENCH.
- PUT A LAYER OF ANTISEIZE ON THE BOLT.
- THREAD THE BOLT THROUGH THE ROSETTE AND INTO THE BENCH TUBE.
- USE A HEX KEY TO SCREW THE BOLT ONTO THE BENCH.